Rock-On Installation

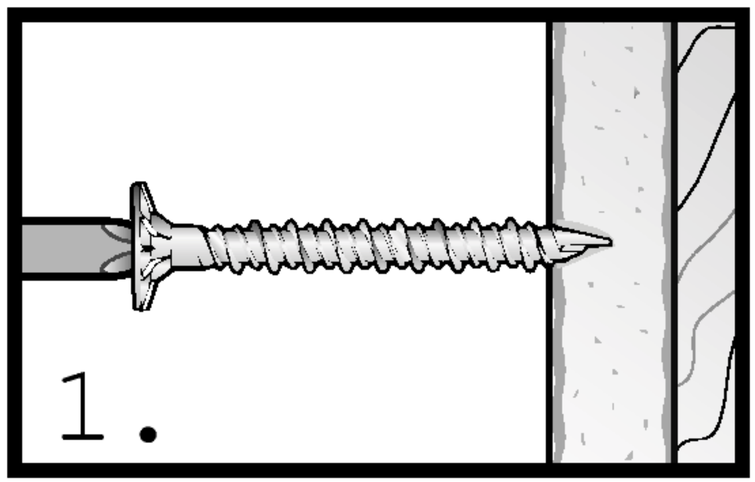

Using #2 Phillips, begin driving Rock-On™ into cement board.

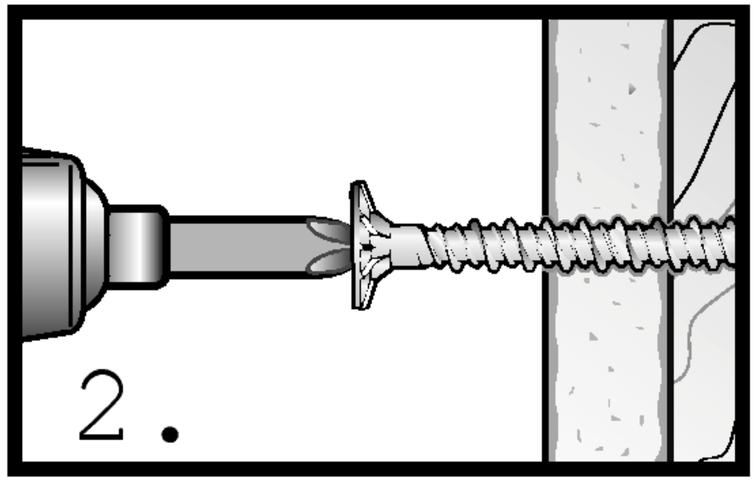

Self-spotting drills through cement board and wood/metal.

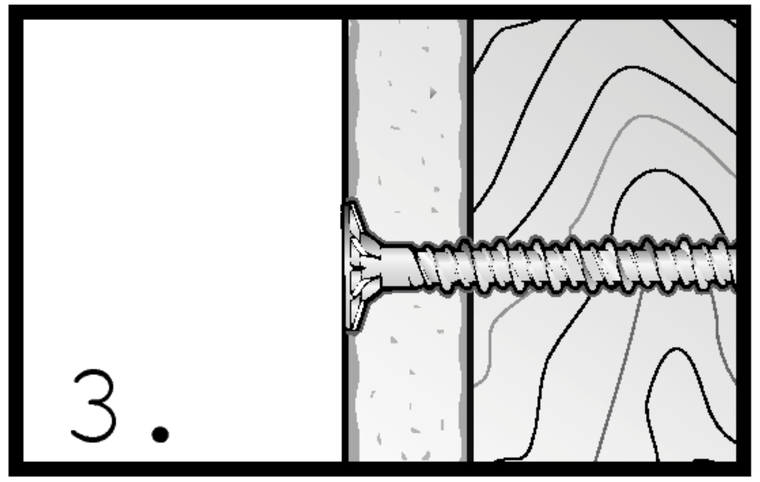

Special rib under screw head countersinks Rock-On™ for flush finish.